



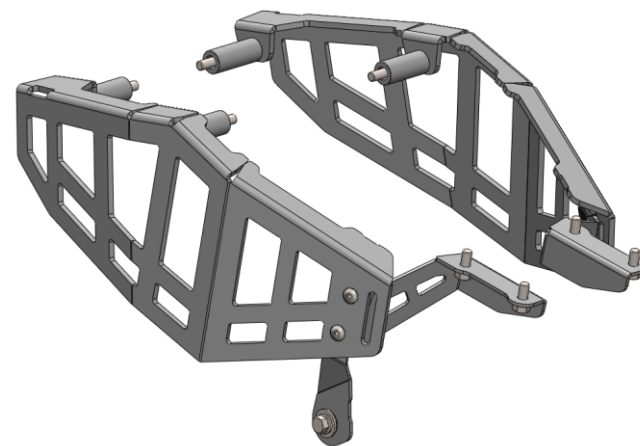


SIDE LUGGAGE RACK
REF.: 2AD222B106

ASSEMBLY INSTRUCTION

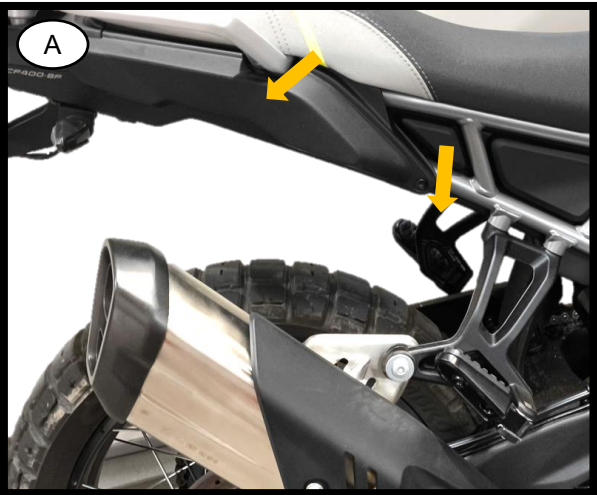

English:

- Remove OEM side plastic and foot rest attachment (Left and Right sides).

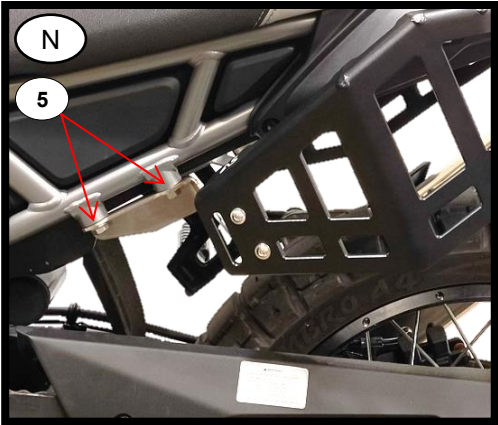

English:

- Torque all screws to the correct value.




N.m		M4	M5	M6	M8	M10	M12
STEEL	8.8	2.7	5.5	9.7	23.0	47.0	80.0
STAINLESS STEEL	A2	2.6	5.1	8.7	21.2	42.0	73.0

20	Suporte Bagagem Lateral / Side Box Support	NºL106	1
19	Suporte Bagagem Lateral / Side Box Support	NºR106	1
18	Suporte Escape / Exhaust Support	NºC106	1
17	Fixação Inox / Stainless Steel Clamp	NºL106	1
16	Fixação Inox / Stainless Steel Clamp	NºR106	1
15	Folha Instrução / Instruction Sheet	2AD222B106	1
14	Olhal de Borracha / Rubber Grommet	HOB0010006 - Ø22xØ12x8 CXØ19x2	1
13	Casquilho Aço ZN / ZN Steel Bushing	Ø20xØ8,5x9mm RPØ12X7,3mm	1
12	Casquilho Alumínio / Aluminum Bushing	Ø20xØ11x50mm	2
11	Casquilho Alumínio / Aluminum Bushing	Ø20xØ11x45mm	2
10	Mola Friso / Stainless Steel Clip	M6	4
9	Porca Freitada FA / Hexagon Flange Lock Nuts	M8 DIN6926 - A2	1
8	Anilha Aba Larga / Large Washer	M8 DIN9021 - A2	1
7	Anilha / Washer	M8 DIN125 - A2	4
6	Parafuso / Screw	M8x25 DIN6921 - A2	1
5	Parafuso / Screw	M8x16 DIN6921 - A2	4
4	Parafuso / Screw	M8x70 DIN931 - A2	2
3	Parafuso / Screw	M8x65 DIN931 - A2	2
2	Parafuso / Screw	M8x25 DIN912 - A2	4
1	Parafuso com FA / Screw with Washer False	M6x20 FA ISO7380 - A2	4
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			




English:

- Apply the items according to the photo.
Torque all screws to the correct value.

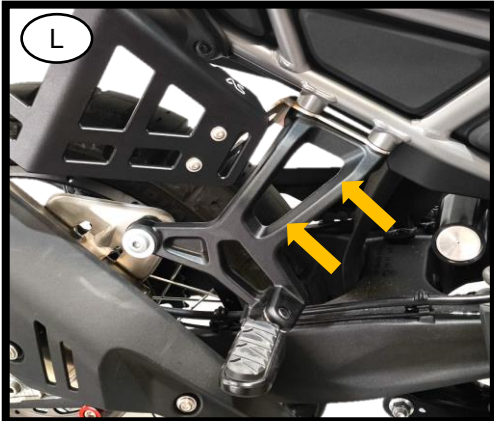


English:

- If you want to remove foot rest attachment (left and right sides), apply item N°5 (Screw – x4).

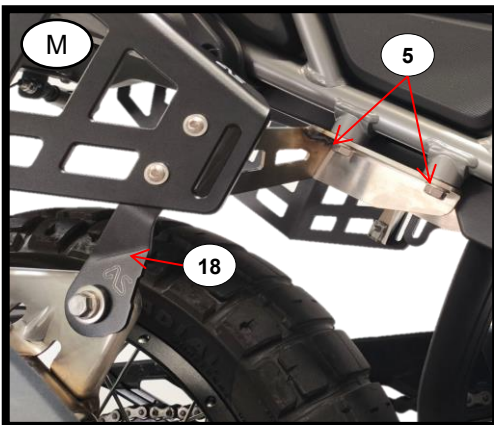

English:


- Apply item N°18 (Exhaust Support – x1) according to the photo – see assembly instruction.

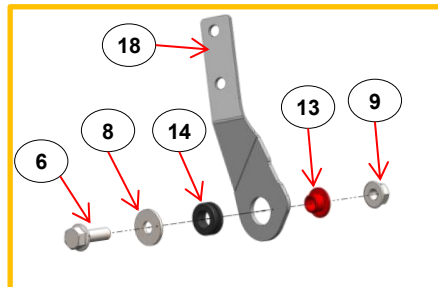

English:


- Cut sheet in attachment (item N°15) so that you can mark the hole plastic (repeat the process for left and right plastic).

► **ATTENTION:** Drill first with a Ø2mm drill to ensure the hole comes out in the correct position and then test it on the bike, only then drill with a Ø22mm drill.

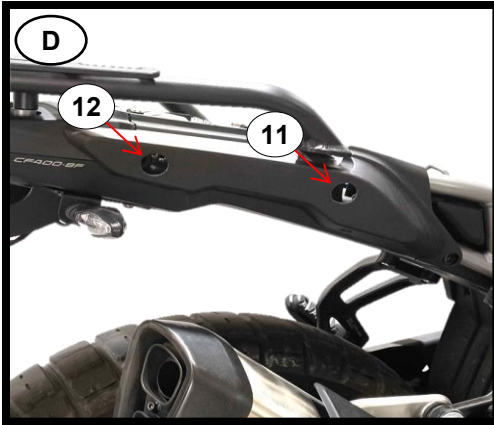


English:

- Reassemble the right plastic on the bike and after apply items N°11 and N°12 (Aluminum Bushing – x2) in the previously drilled holes – see position in the photo.

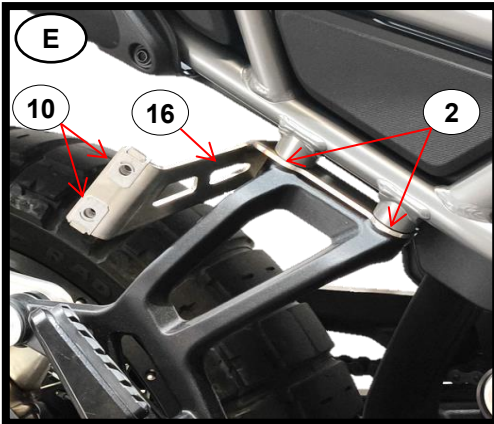


English:

- Reassemble foot rest attachment according to the photo.

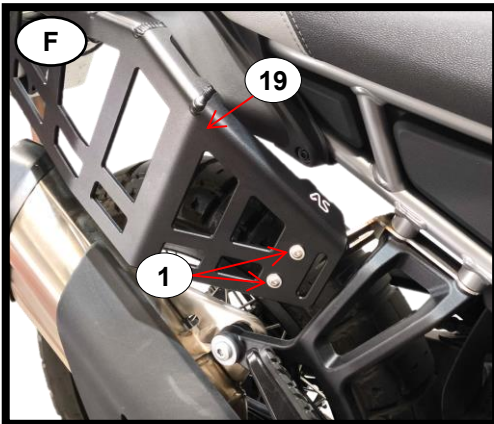


English:

- Mount item N°19 (Right Side Box Support) with item N°1 (Screw – x2).

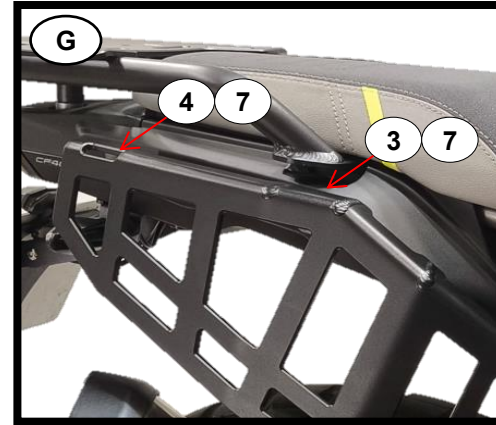


English:

- Apply the items according to the photo.
Torque all screws to the correct value.

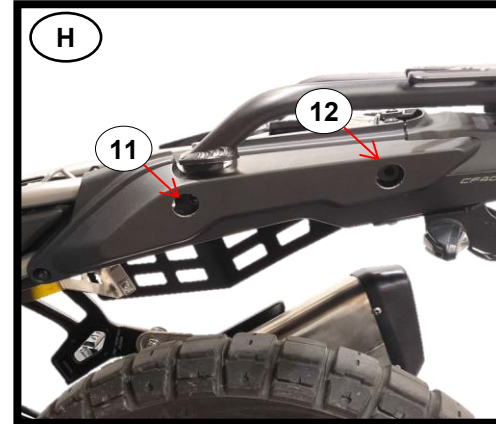

English:

- Reassemble the left plastic on the bike and after apply items N°11 and N°12 (Aluminum Bushing – x2) in the previously drilled holes – see position in the photo.

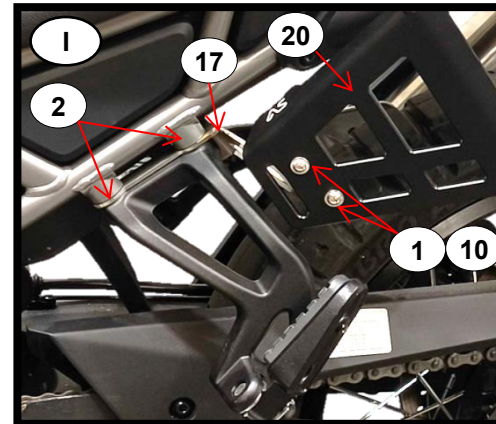

English:

- Reassemble foot rest attachment according to the photo.